

AC 164 STF/ 5 AC 164 BUF/ 5


Montageanleitung

Assembling instruction



AC 164 STF/ 5
AC 164 STF/ 5

AC 164 BUF/ 5
AC 164 BUF/ 5

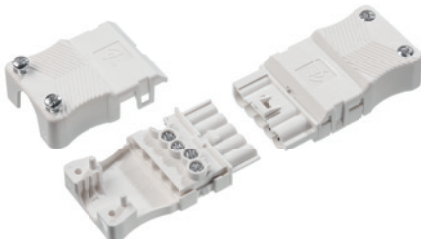

POSITIONIERUNG DER ZUGENTLASTUNGSBRÜCKEN

Positioning of the Strain Relief Bridges

0,5 - 1,5 mm ²	16 A 250/400 V	0,5 Nm	
-------------------------------------	--------------------------	---------------	--

5 POLE Ø 6,5 - 11,5 mm

POS. 02	X	X	Ø 7,8 - 8,6	Ø 8,7 - 9,5	≥ Ø 10,8
POS. 01	Ø 6,5 - 7,1	Ø 7,2 - 7,7	X	Ø 9,6 - 10,7	


KABELDURCHMESSER ERMITTELN

Determining the cable diameter




KEINE ZEL-BRÜCKE

No ZEL insert

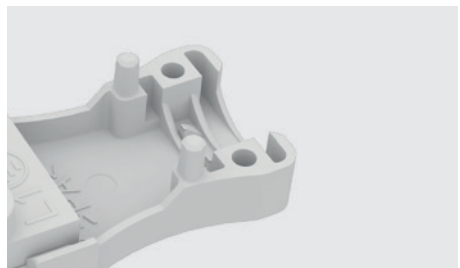


ZEL-BRÜCKE AN POS. 1

ZEL insert on pos. 1

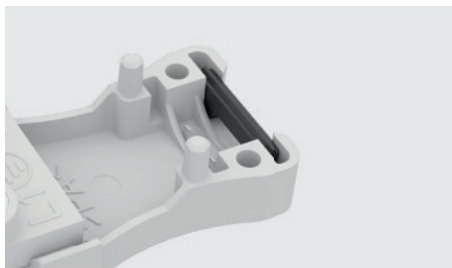


ZEL-BRÜCKE GEDREHT AN POS. 1

ZEL insert turned on pos. 1

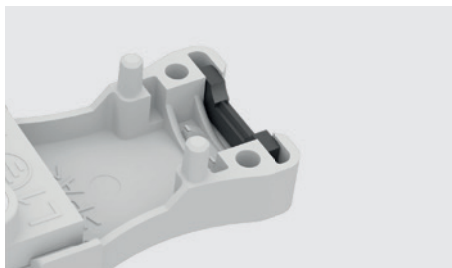

ZEL-BRÜCKE AN POS. 2

ZEL insert on pos. 2

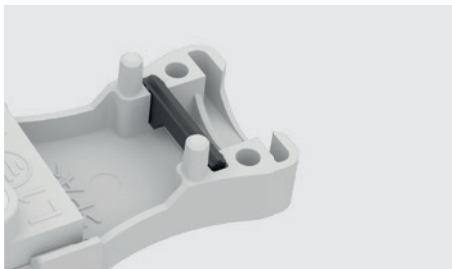

ZEL-BRÜCKE GEDREHT AN POS. 2

ZEL insert turned on pos. 2

